


ADE/Honeywell Alarm Dialer F8.02R011

The alarm dialer requires power (red/black wires), a connection to the 'COMMS' terminal for controlling the keypad and 2 connections to the bell/SET terminals.

Wire the alarm to the dialer as shown below.

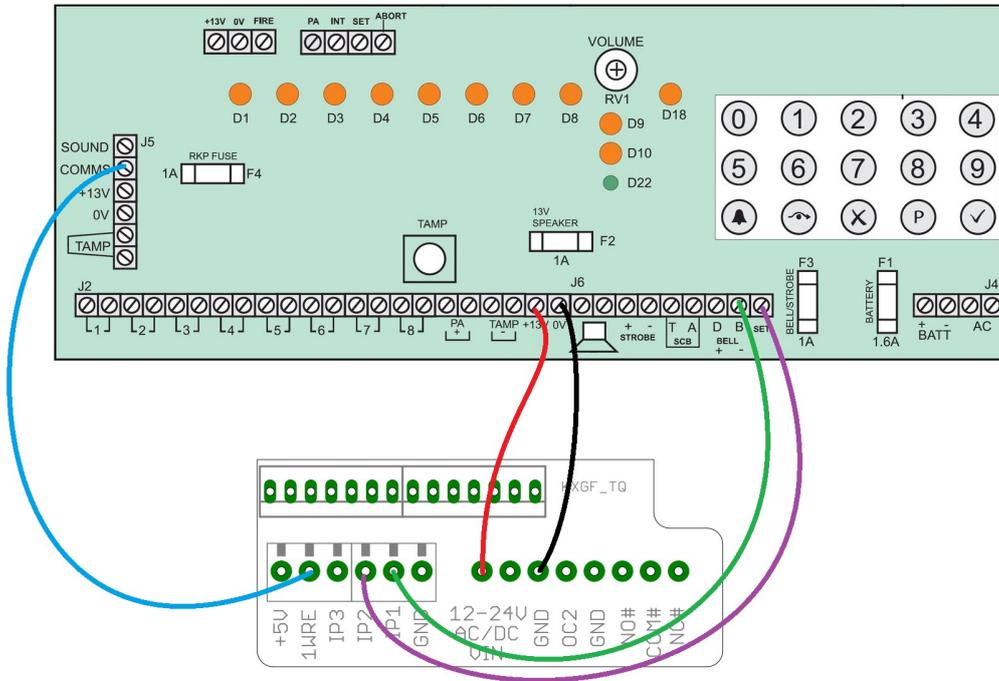

Remote Keypad

User Restore
Press [X]



To set and unset your alarm you should type your code into the remote keypad. Due to the lag in transmission, it is recommended to enter you full 4-digit PIN into the send box under the keypad then click 'Send'. All 4 digits will then be sent in sequence as if using the alarm in person. If the display shows 'User Restore, Press [X]', then you should press the X key before entering your code.

On ADE G4 alarms the display will show the output from the alarm keypad. On G3 alarm panels this will simply display as 'Connected'. The LED indicators under the display refer to the LEDs on the alarm keypad.

If the display appears frozen, press the X key to wake it from sleep mode.

Codes are not stored on the portal